

Water Pump and Ducts

104.02


Page 10-125/126

To remove thermostat from assembly, remove three bolts (6) and washers holding housing cover (5) to housing (1).



Remove thermostat (3) and seal (2) from housing.

Installation is reverse of removal. Use new gaskets.

1. Housing 2. Seal 3. Thermostat 4. Gasket 5. Housing cover
6. Bolt

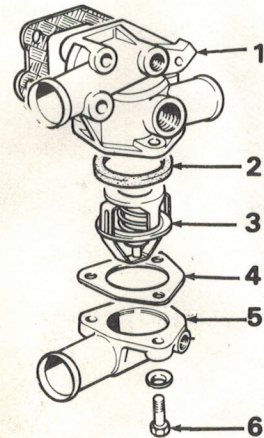

1. Hose
2. Hose
3. Hose
4. Thermostat assembly
5. Hose
6. Water manifold
7. Gasket
8. Water pump
9. Gasket

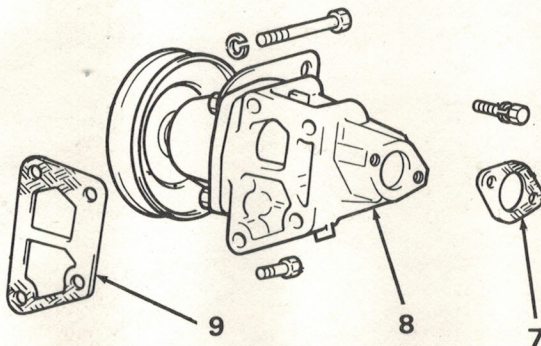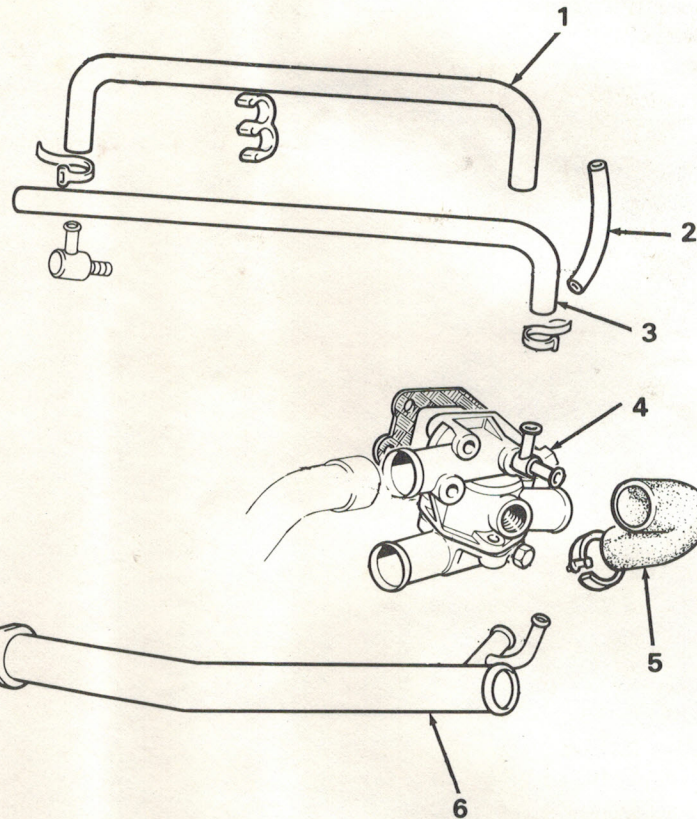

EXPLODED VIEW OF WATER PUMP AND DUCTS